



Time-Keeper MAX
Firmware Update Guide



Table Of Contents


Update Firmware	2
-----------------------	---

Update Firmware

To update the firmware you will need to copy the firmware update to the Time-Keeper MAX's SD card, or install the new SD card with the update already installed on it. The SD card is located on the back of the units front faceplate. Begin by removing the Time-Keeper MAX front faceplate. Gently rock the faceplate back and forth to remove it from the Time-Keeper MAX's base.



Remove the SD card by pushing it further into the socket until you hear it click and release. You can now remove the SD card. Use a computer to copy the firmware update file TKIII.bin to the SD card and replace the file currently there, or install the new SD card with the firmware file already installed. Install the SD card back into the SD card socket, push it all the way in until you hear it click and release.

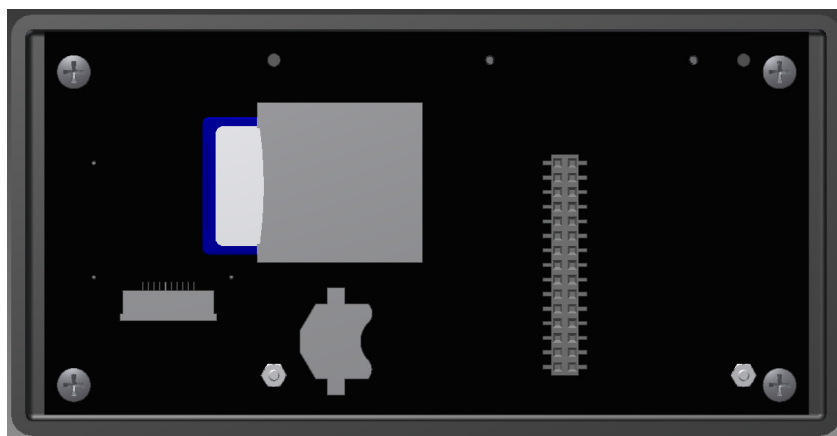


Re-attach the Time-Keeper MAX Faceplate to the base. Make sure the faceplate is fully seated and sitting flush on the base. Begin by pushing the menu button once and then push the fwd button until you come to the Utilities Screen shown below. If you pass it the first time continue to push the fwd button until you get back to it.




Push the enter button once. The following Screen will be displayed.



Push the enter button once. The following Screen will be displayed.

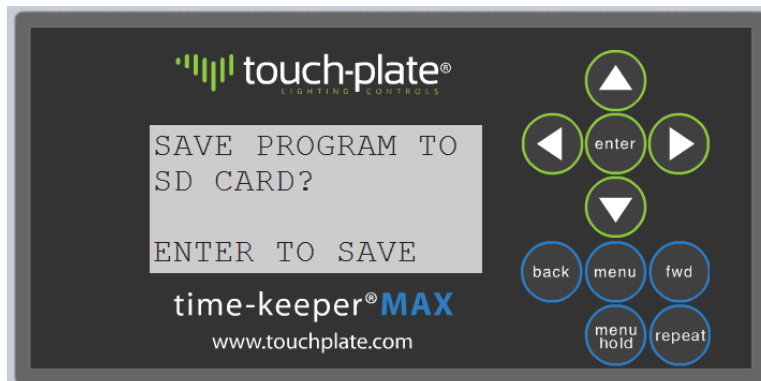

Push the enter button once to begin saving your current programming settings. When the save is complete the following Screen will be displayed.

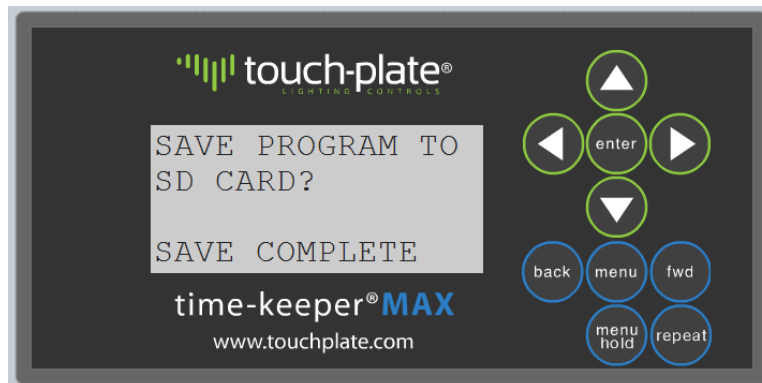

Push the fwd button until you come to the following Update Firmware Screen. Push the enter button to begin the update. A Bootloading Screen will be displayed during the update process.



When the update completes it will restart the application and the Main Screen where the current revision will be displayed. Your Time-Keeper MAX is now running the current application.




You now will need to reload your program to the Time-Keeper MAX. Push the menu button once and push the fwd button until you come to the following Utilities Screen.



Push the enter button once. The following Screen will be displayed.



Push the enter button once. The following Screen will be displayed.

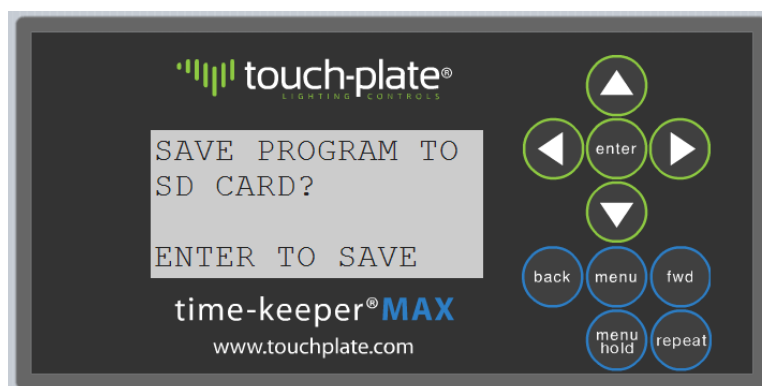


Push the fwd button once. The following Screen will be displayed.



Push the enter button once. The following Screen will be displayed.



When the program is completely loaded the following Screen will be displayed.

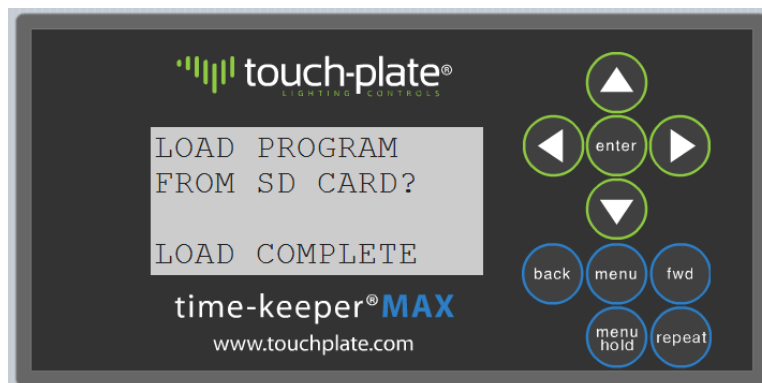

You now need to power cycle the Time-Keeper MAX. When the unit boots to the Main Screen the process is complete. Your Time-Keeper MAX should now be up to date and have all of the original programming loaded onto the unit.





Time-Keeper MAX Firmware Update Guide
Revision: 2.0a

