



Solare Select Quick Start Guide

Table Of Contents

Preparation	2
Warranty.	2
Solare Select Overview	3
Solare Select Low Voltage Power Wiring	4
Solare Select RS485 Wiring	5
Solare Select RJ-45 Wiring	6
Solare Select Dimmer Module Wiring	7
Solare Select Line Voltage Wiring.	8
Solare Select RS-485 Termination Dip Switches.	9
Solare Select Option Dip Switches	9
Setting the Solare Select Address	10
Solare Select Other Function Dip Switches	11
Troubleshooting Guide	12
Frequently Asked Questions.....	13

Preparation

Unpack the Solare Select and inspect the contents for damaged or missing products. If any problems arise, please contact Touch-Plate at 260.426.1565 for assistance.

Precautions

The Solare Select hardware is designed to be in environments that have a temperature range of 0-60°C (non-condensing atmosphere). Installing in an environment outside of these parameters will shorten the life span of the hardware.

Touch-Plate recommends the use of 18 to 22 AWG wire for low voltage wiring of contact closure products, 18 AWG wire for all 24v power connections, and 16 AWG wire for Smart Switch Stations.

All 120VAC wiring must use wire as specified by National Electric Code for load size and wire length.

Compatible Hardware

The Solare Select is a control board that can be a part of a networked, intelligent system.

- Panel Products (Solare Series Dimmer Modules)
- Master Control Products
 - Time-Keeper Series
 - Nexus Series

Warranty

Touch-Plate warrants this product against defects in materials or workmanship, under normal use, for a period of ONE (1) year from date of shipment. If a defect arises and a valid claim is received within the Warranty Period, Touch-Plate will repair or replace the product at no charge.

This warranty does not apply to:

- a. Damage to unit(s) caused by accident, acts of God, inappropriate installation, faulty installation, or any negligent use;
- b. Unit(s) which have been subject to being taken apart or otherwise modified;
- c. Unit not used in accordance with instructions;
- d. The finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear;
- e. Non-Touch-Plate hardware installed by the user;
- f. Damage caused by Non-Touch-Plate products;
- g. Damage caused by operating the product outside the permitted or intended uses described by Touch-Plate;
- h. -or- Specific plans or Specific application requirements, unless the plans and specifications have been forwarded to Touch-Plate and Touch-Plate has approved and accepted the plans in writing.

EXCEPT AS PROVIDED IN THIS WARRANTY, TOUCH-PLATE IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, INCLUDING BUT NOT LIMITED TO, INSTALLATION OR REPLACEMENT LABOR COSTS.




Solare Select Overview

The Solare Select is a part of a networked, intelligent system.

- The green blinking light on the Solare Select is the “heartbeat”. This indicates that power has properly been brought to the system.

Board Items	Options	Board Position	Page #
Low Voltage Connections	18-24VDC Power Connection	A	4
	RJ45 Connection	B	6
	RS485 Connection	C	5
	Manual Overrides	D	-
	Dimmer Module Connection	E	7
Dip Switches	RS485 Terminations	F	9
	Relay Address	G	10
	Dimmer Address	H	10
	Other Functions	I	11
Line Voltage Connections	Dimmer Module Connections	J	8
	Lighting Load Connections	K	8
	Neutral Bar	L	8
	Ground Lug/Ground Bar	M	8
	Transformer Feed	N	8

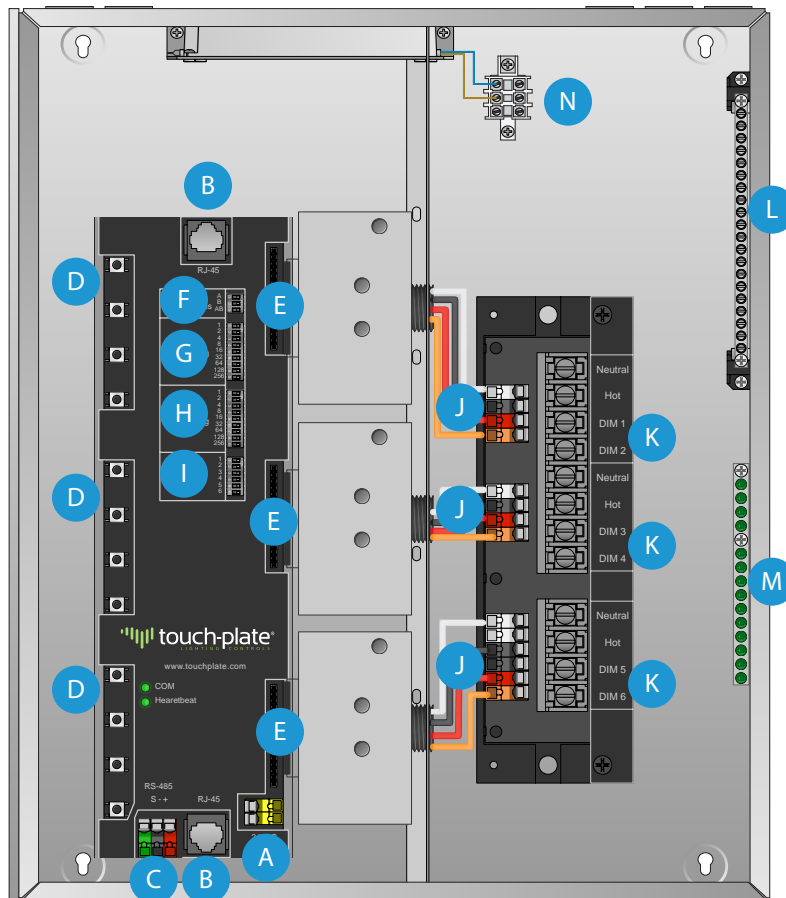


Solare Select Low Voltage Power Wiring

To correctly bring power to the Solare Select, use the wiring diagram below.

Power must be a Class 2, Isolated Transformer, with a rating of 24 VDC.

This will typically come from the factory pre-wired.

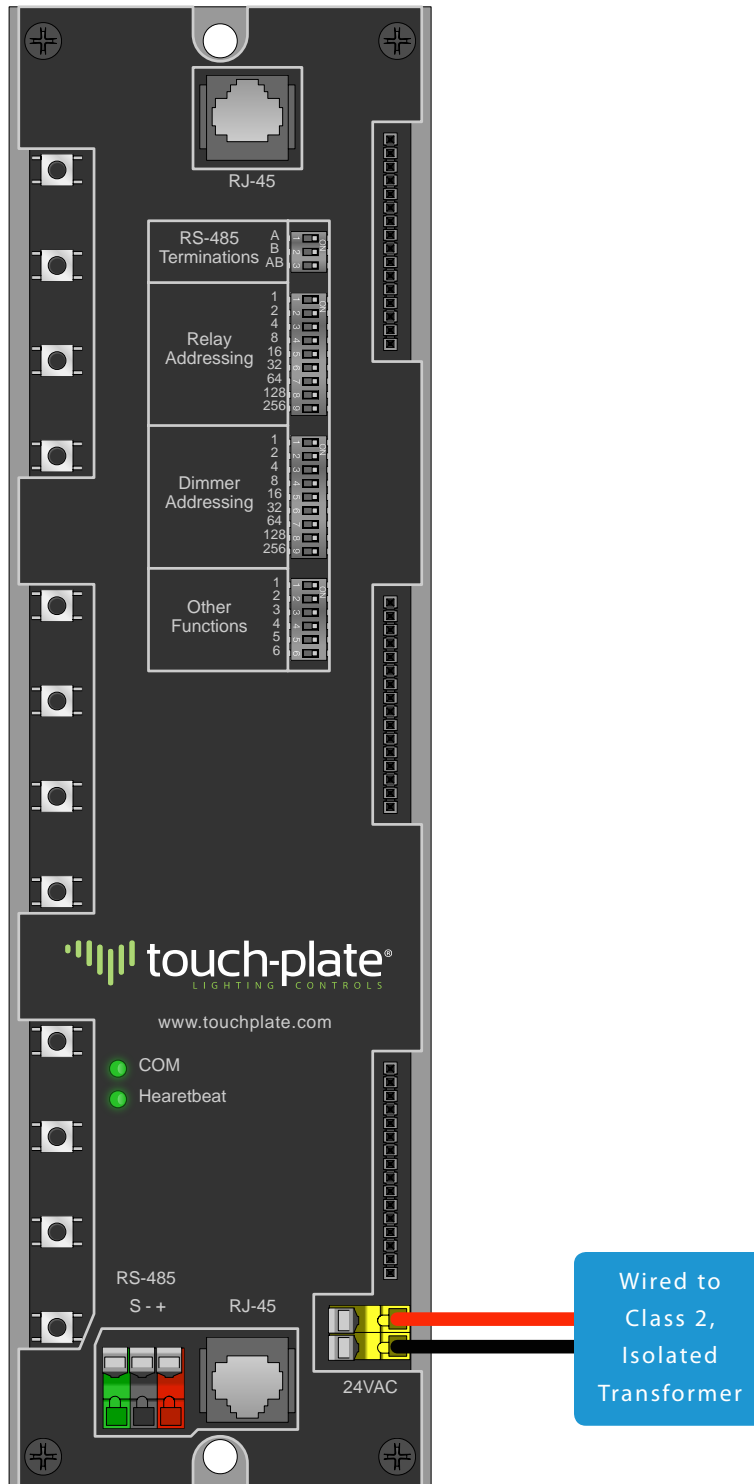


Solare Select RS485 Wiring

To correctly wire the RS485 connection to the Solare Select, use the wiring diagram below.

- **Shield or Ground for RS485 connection must be isolated from the ground on the power supply. Using the same ground will create a direct short across the diode bridge and damage the unit!**

Wire must be Liberty 18/2C SHLD or an equivalent wire.

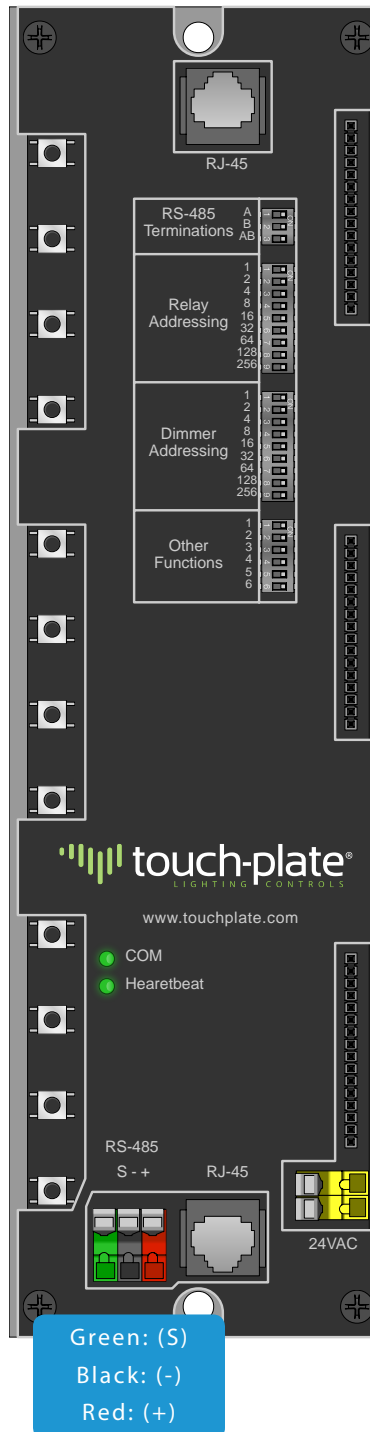


Solare Select RJ-45 Wiring

To correctly wire the RJ-45 connection to the Solare Select, use the wiring diagram below.

Cable must be a Cat5e or an equivalent cable.


Typical items wired via the RJ-45 connection are: other Touch-Plate panels and/or Touch-Plate master controllers.

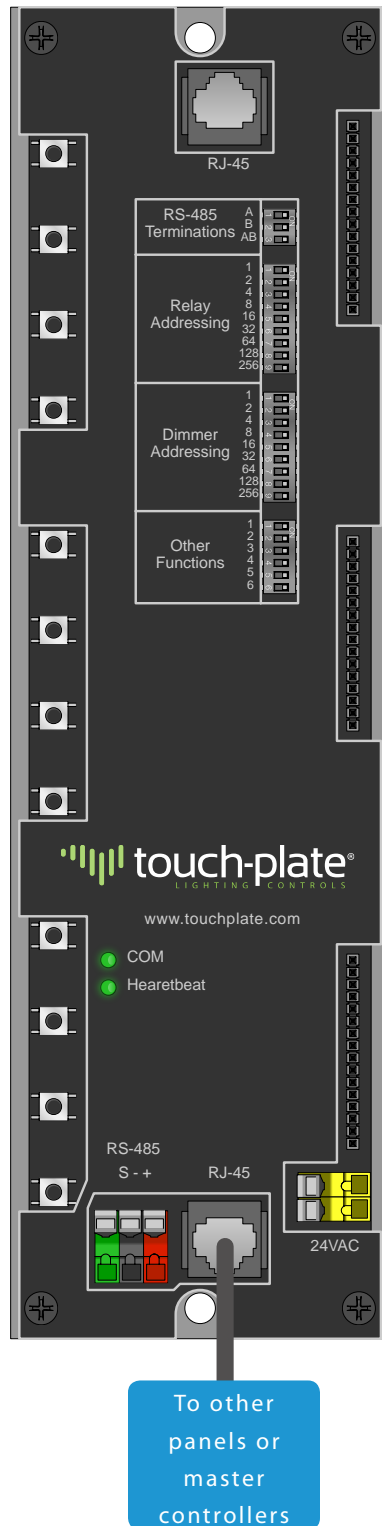

Solare Select Dimmer Module Wiring

To correctly wire the dimmer modules to the Solare Select and the line voltage side, use the wiring diagram below.


Only Touch-Plate dimmer modules can be wired to the Solare Select.

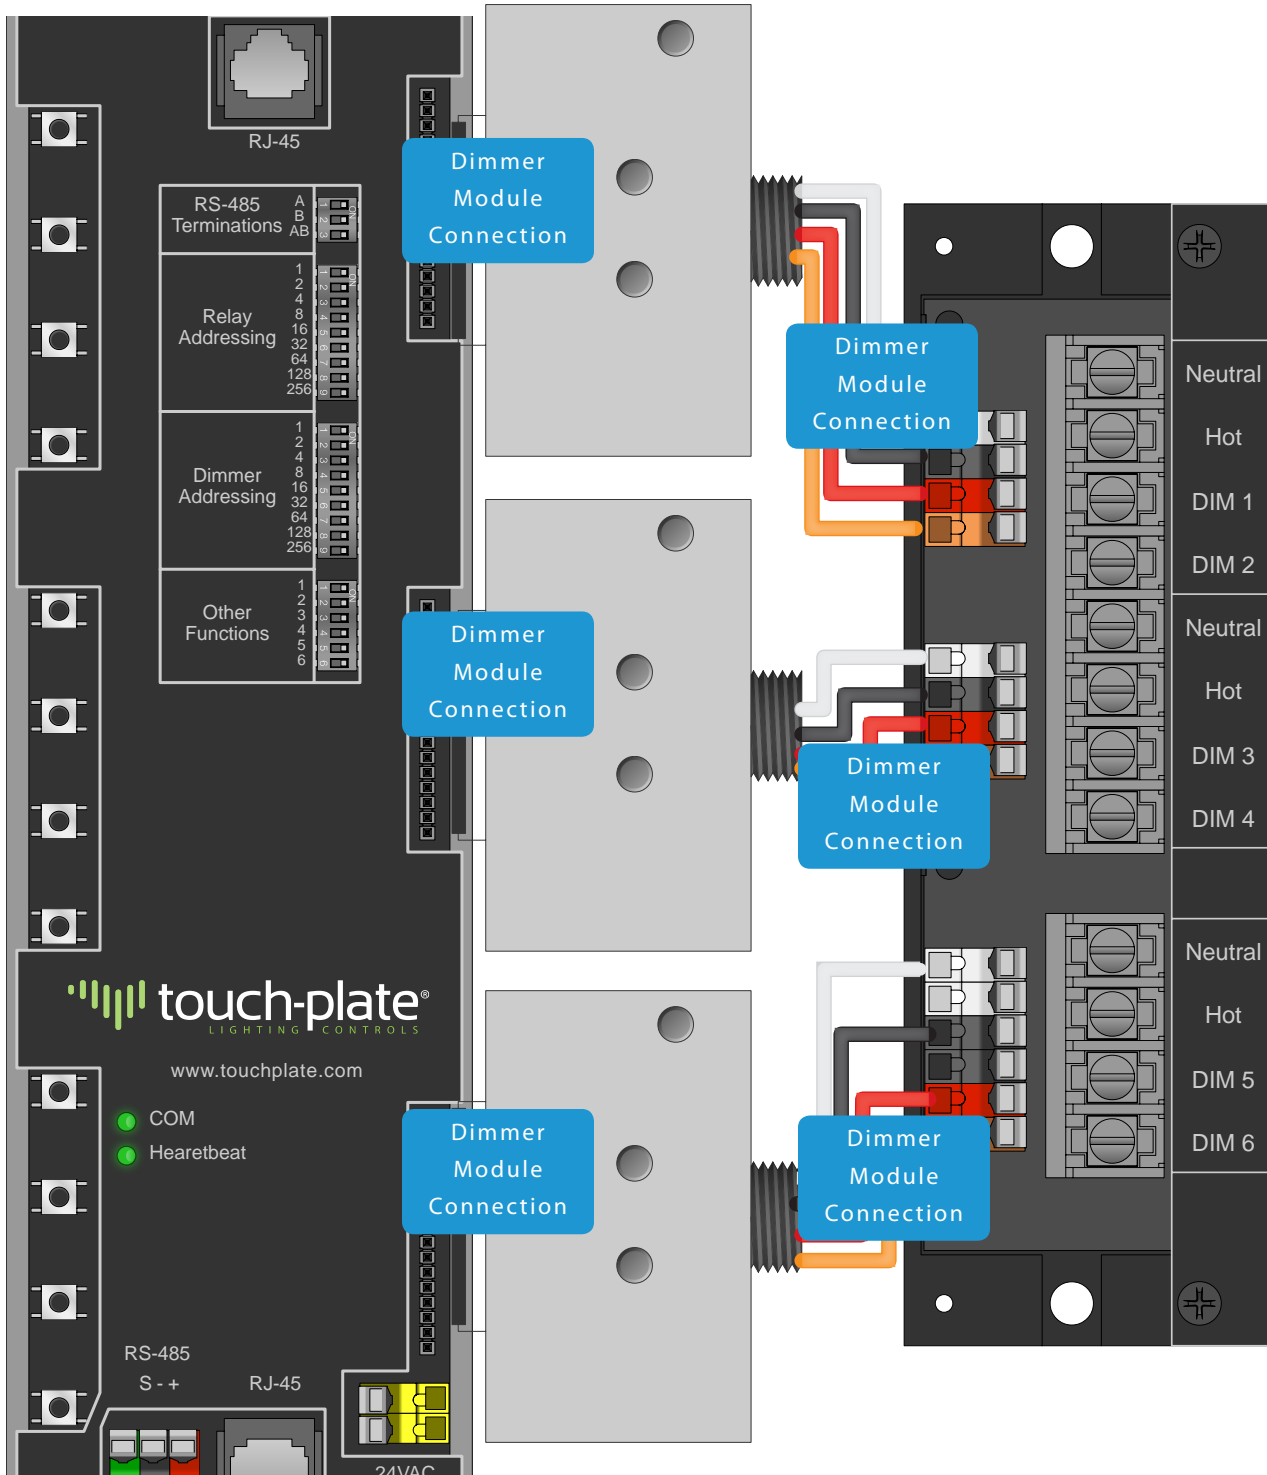

Solare Select Line Voltage Wiring

To correctly wire line voltage connections to the Solare Select line voltage board, use the wiring diagram below.

- Each dimmer module can have its own hot feed brought to it from the breaker panel, or hots can be jumped together depending on load sizes.
- Dimmer wattage supported is:
 - 300 Watt dimmer modules: 300 watts per dimmer channel.
 - 600 Watt dimmer modules: 600 watts per dimmer channel.

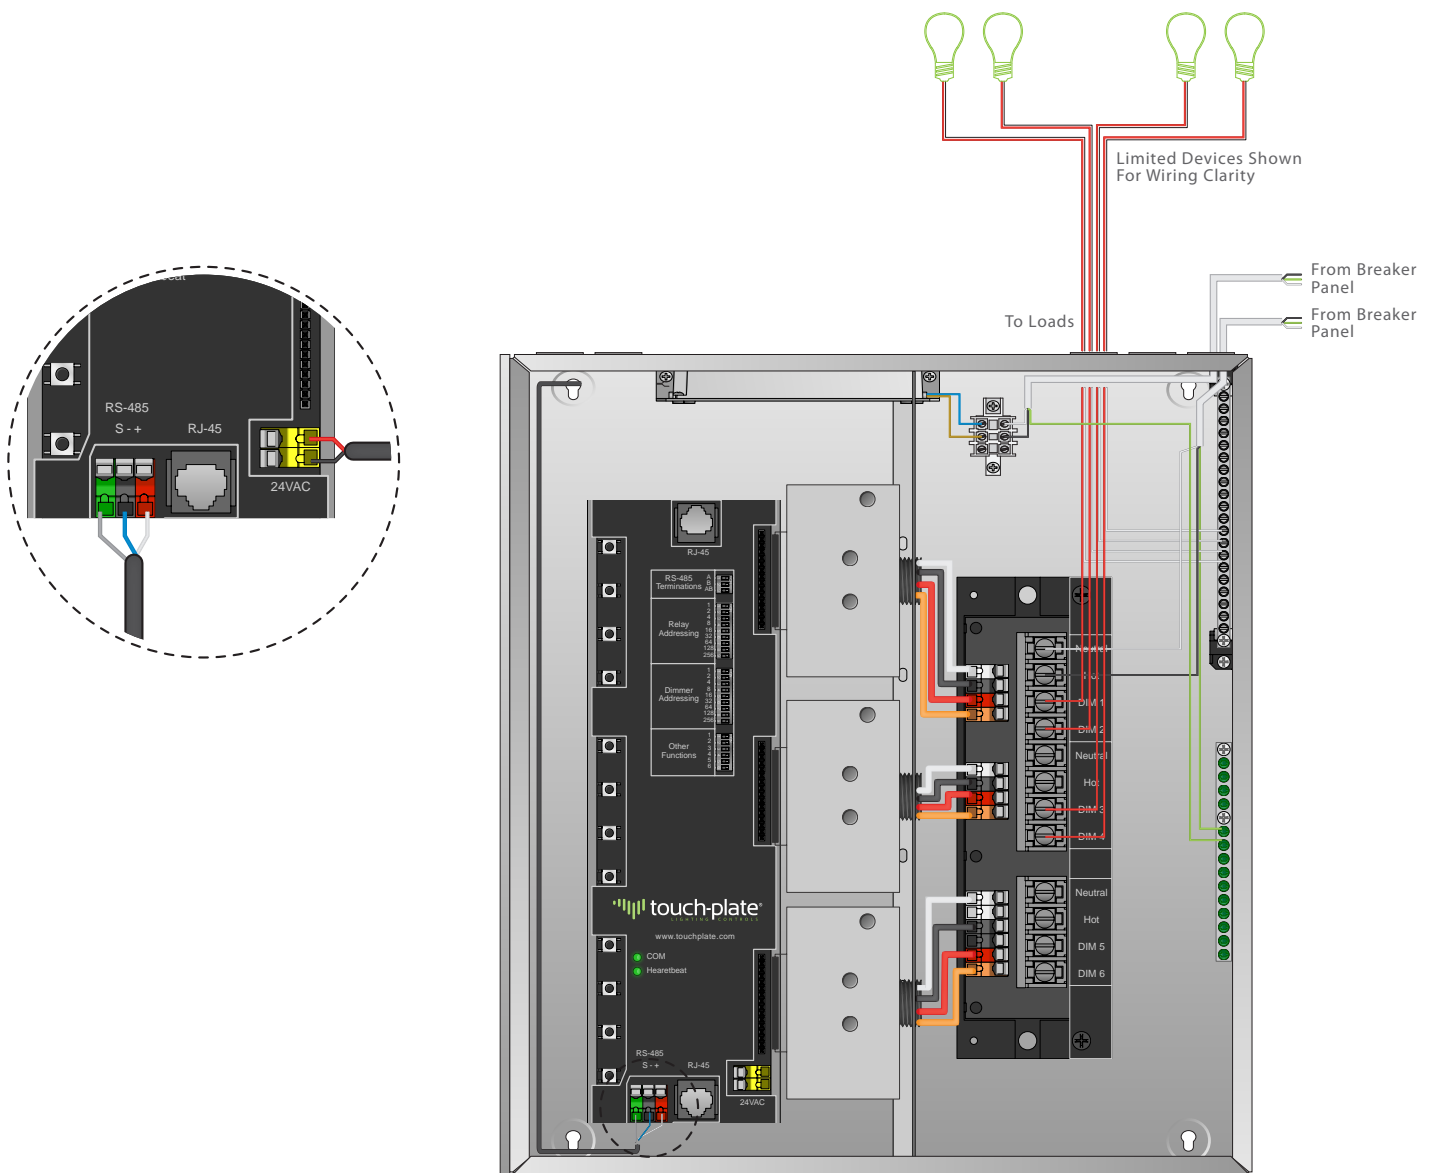

Solare Select RS-485 Termination Dip Switches

The RS485 Termination Dip Switches are used to set RS485 terminations.

Option	1	2	3
RS485 Termination (Non-Inverting Input Pull Up; 510 Ohms)	ON	OFF	OFF
RS485 Termination (Inverting Input Pull Up; 510 Ohms)	OFF	ON	OFF
RS485 Termination (Line to Line Termination; 120 Ohms)	OFF	OFF	ON



Setting the Solare Select Address

The Address Dip Switches are used to set the Address.

Normally, these Dip Switches come from the factory pre-programmed to Address #1.

Use the setting diagram to change the Address if needed. Note that for the address changes to take effect, a power cycle needs to occur.

Address	1	2	3	4	5	6	7	8	9
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
19	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
20	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
Valid Addresses are 1-256									

Valid addresses are from 1 to 72. Addresses are set using the nine Address Dip Switches, which each have a value noted in the chart below.

Address Dip Switch	1	2	3	4	5	6	7	8	9
Value	1	2	4	8	16	32	64	128	256

The values of all switches in the ON position are added together and the total is equal to the address. See the examples below:

Address 1: Turn on switch 1 only, and leave all other Address switches off.

Address 13: Turn on switches 1, 3 and 4. The value of those switches are $1 + 4 + 8 = 13$.



Solare Select Other Function Dip Switches

These options typically come from the factory preset.

The Baud Rate is only applicable to Modbus systems.

The Discovery Mode is used when more dimmer modules are added to the SLR-S. This will allow them to be found and to begin communication between the SLR-S and the dimmer module.

Other Function	Modbus/DMX	1	2	3	4	5	6
Baud Rate 9600	Modbus	OFF	OFF	OFF	N/A	N/A	N/A
Baud Rate 19200	Modbus	ON	OFF	OFF	N/A	N/A	N/A
Baud Rate 28800	Modbus	OFF	ON	OFF	N/A	N/A	N/A
Baud Rate 38400	Modbus	ON	ON	OFF	N/A	N/A	N/A
Baud Rate 57600	Modbus	OFF	OFF	ON	N/A	N/A	N/A
Baud Rate 76800	Modbus	ON	OFF	ON	N/A	N/A	N/A
Baud Rate 115.2K	Modbus	OFF	ON	ON	N/A	N/A	N/A
Baud Rate 230.4K	Modbus	ON	ON	ON	N/A	N/A	N/A
Discovery Mode On	Modbus or DMX	N/A	N/A	N/A	N/A	ON	N/A
Discovery Mode Off	Modbus or DMX	N/A	N/A	N/A	N/A	OFF	N/A



Troubleshooting Guide

If no response occurs when the system is powered up, use the following steps to identify the problem.

1. Look for the LED indicator to be blinking on it.
 - a. For the indicator to be blinking, power has to be correctly brought to the system. If the LED indicator is blinking, move on to step 2.
 - b. If the LED indicator is not blinking, confirm power connections and then contact the factory for assistance.
2. Verify that the line voltage has been fed to all the necessary dimmers.
3. Verify that each light fixture is connected to the switched leg.
4. Verify that 120 VAC has been connected to the transformer and it has 24vdc output.
5. If these steps do not solve the problem, please contact the factory for assistance.



Frequently Asked Questions

1. Can I update just one section of my Touch-Plate system?
 - a. In most applications just one section of the Touch-Plate system cannot be updated.
 - b. There are some applications where one section of the Touch-Plate system can be updated. This is only possible when there are no shared commons and each panel location has its own transverter.





Touch-Plate Solare Select Quick Start Guide
Revision: 2.0a

